



INSTRUCTIONS FOR WATER GLOBES / DRIFTING BITS / MOVEMENT MOUNTING PLATES

WATER GLOBES With and Without Base

Can Be Used W/Musical Movements, Too

Add "DRIFTING BITS" For Even Greater Appeal (See Below). All Globes Include Rubber Sealing Gasket. (4-3/4" Dia. Globe Has 2-3/4" Bottom Opening. 6" Dia. Globe Has 3-3/4" Bottom Opening.)

EXPLODED VIEW ILLUSTRATES
SIMPLE COMPONENTS

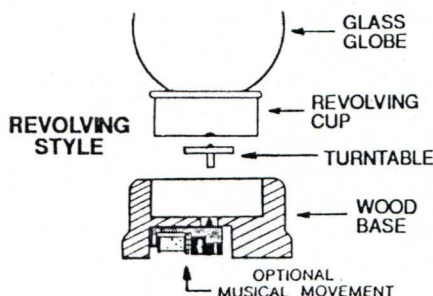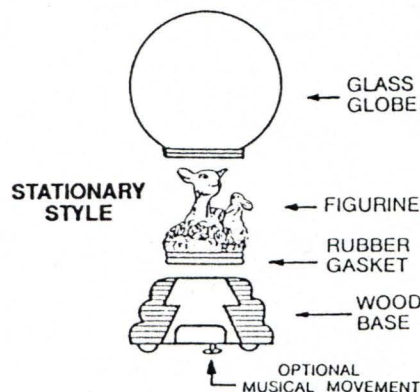

EASY TO ASSEMBLE

Just glue any suitable **waterproof** object to top of rubber gasket with waterproof glue such as Silicone Adhesive (see Catalog). When dry, turn globe upside down and **over-fill** completely with water to eliminate any possible air pockets. **IMPORTANT:** If you wish to add **DRIFTING BITS**, see instructions below. Insert gasket with attached figurine into globe. The raised ring on the edge of the gasket **must** fit into groove in neck of globe. (Gasket should now be flush with bottom edge of globe.) Let any excess water dry **completely** from edge of gasket and globe. **Stationary Models:** With globe still upside down, place base over neck of globe. Thoroughly seal gasket to globe and globe to base with Silicone Adhesive or Hot Glue (see Catalog 16).

Revolving Models: With globe still upside down, thoroughly seal gasket to globe with Hot Glue or Silicone Adhesive. Seal "revolving cup" over neck of globe using a generous amount of cement. Glue metal turntable to revolving cup so that point in center of turntable fits into depression in center of revolving cup's base. *This will center turntable so that globe revolves properly.* Remove shell from your musical movement (our 233 series movements recommended). Leave plastic base attached and glue movement into bottom of base with winding-key shaft *centered* in pre-drilled hole. The turntable screws onto winding shaft of movement to wind unit. **NOTE:** If you are using a glazed figurine inside the Water Globe, glaze it both inside and outside. It is recommended that you glue the figurine to the rubber gasket all the way around so no water will seep up inside the figurine.

MOVEMENT MOUNTING PLATES for WATER GLOBES

Pre-drilled To Fit Full Size 18-Note Musical Movements

for 4-3/4" Globes and for 6" Globes

ADD MUSIC
TO YOUR
WATER GLOBE

Musical Movement
Not Included

TO USE: Remove plastic shell and base of musical movement. Save screws and use to mount movement to Mounting Plate. Only **two** screw holes in base are used. **NOTE:** If mounted movement won't fit into base, re-mount movement on **other side** of Plate.

IMPORTANT: When installing musical movement, use our **shortest** T-Bar Key and Rubber Bumpers for key clearance.

Movements NOT included.

DRIFTING BITS for Water Globes Great For Adding Color and Motion

FLAKES

Specially Formulated To Give The
Appearance Of Falling Snow.

Choose From


WHITE
(Snow Flakes)

MULTI-COLOR
PASTEL FLAKES

IRID. WHITE
GLITTER

BATS BLACK PLASTIC

The Perfect Addition
To Halloween or
Other Scary-Theme
Water Globes

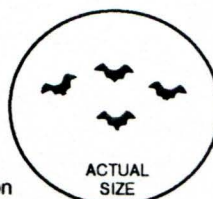

Instructions for Use

1. Wash Drifting Bits in a fine mesh strainer to remove any shards or dust.
2. Both Flakes and Bats must absorb water so they won't stick to sides of Globe or float at top. To accomplish this, fill Globe with water and drop Bits in. Cover and let stand for a few days until Bits settle to bottom. Gentle agitation once a day helps. Bits that won't settle may be skimmed off if desired (see NOTE below).
3. When Bits have settled, **over-fill** Globe completely with water to eliminate any possible air pockets. Finish Globe assembly as indicated above.

NOTE: Do not be discouraged if some Bits will not settle to bottom. It may take several weeks or longer... But, rest assured, they **will** settle eventually.